

### TRIUMPH HUB & DIFFERENTIAL TOOLS



1st ROW (TOP TO BOTTOM) SHOWS THE VARIOUS ADAPTORS THAT ARE USED WITH MASTER TOOL SHOWN IN IMAGE P0004010 (MASTER TOOLS AND TOOL CATALOG FOLDER): 18G47BD (TRIUMPH MODELS AS WELL AS JAGUAR MG & LAND ROVER MODELS): BLT2051/S4221A-16 (TRIUMPH MODELS): BLT2052/S4221A-17 (TRIUMPH MODELS AS WELL AS MGB & JAGUAR MODELS):

2nd ROW SHOWS DUMMY PINION 18G191M (TRIUMPH & MG): INSTALLATION SLEEVE S4221A-16/3 (GOES WITH ADAPTOR IMMEDIATELY TO THE LEFT):

3rd ROW SHOWS DIFFERENTIAL CASE SPREADER ADAPTOR BLT2017/S101-1 (TR4A, TR250 & TR6 MODELS): DIFFERENTIAL CASE SPREADER ADAPTOR 18G131E/S101-23 (TRIUMPH MODELS AS WELL AS MG & JAGUAR MODELS):

4th ROW SHOWS AXLE SHAFT BEARING REMOVER ADAPTOR KIT BLT2045/S4221A-7B (TRIUMPH SPITFIRE & GT6 MODELS):

5th ROW SHOWS SNAP-ON SPECIAL WRENCH ST845 (USED FOR ADJUSTING REAR HUB BEARING END FLOAT ON TR4A, TR250 & TR6 MODELS):

6th ROW SHOWS DUMMY PINION BLT2006/M84B-1 (TR4A, TR250 & TR6 MODELS): PINION BEARING SETTING GAUGE BLT2005/M84B (TR4A, TR250 & TR6)

7th ROW SHOWS REAR HUB REMOVER BLT2019/S109C/M86C (TR4A, TR250, TR6, SPITFIRE & GT6 MODELS):